

Touch Handle

User Manual



Users can download and install the App by scanning this code or searching "Janus Lock" in Apple App Store or Google play.

 
• Attention

- * It is strongly recommended that you read this manual carefully before using the product. It will ensure you use the product correctly.
- * The company has the right to improve the product without notifying the user, including the product appearance, function parameters, usage methods, etc.
- * The company does not provide guarantee, statement and promise when the products are used for any special purposes.
- * The parameters of electronic products may change under different external environments. These products can only be used in certified environments.


• Package List

After opening the product packaging, please make sure the product is intact, and confirm the accessories are complete as per the figure below.

① Touch Handle	1 set
② Escutcheons	2 pieces
③ Silicone pad for handle rosette	2 pieces
④ AAA battery	4 pieces
⑤ Connection screw M4 x 45mm	4 pieces
⑥ Screw tube M5 x 38mm	4 pieces
⑦ Screw driver	1 piece

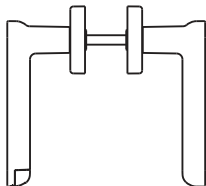

①

 

②



③



④



⑤



⑥

 


⑦

• Installation Instructions


This handle is designed for door thickness between 38mm to 56mm. Check that your door fulfils this requirement before you start installation.

- * Check if there are 38mm Back-to-Back screw holes in the lock body, otherwise please replace the lock body.
- * Please install the handle as the diagram below. Make sure the handle with fingerprint is installed on the outside of the door.
- * Carry out the assembly with the door open.

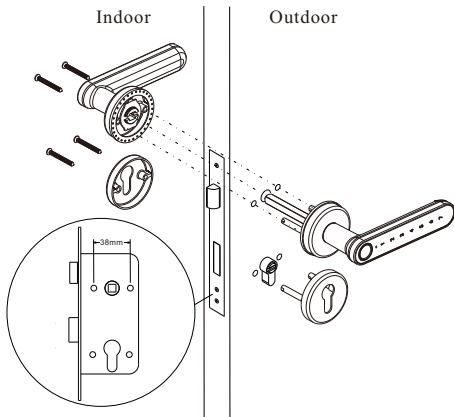

• Batteries & Battery Warnings

 - * Put in the batteries according to "+" "-" sign on the lid.
- * When the low battery indicator lights, please replace the battery to avoid battery leakage and damage or unable to unlock the product.
After warning signal appears, theoretically the door can still be unlocked for about 50 times.
- * Dispose the used batteries appropriately. Do not bury or burn the batteries and keep away from children. Do not recharge or disassemble the batteries.

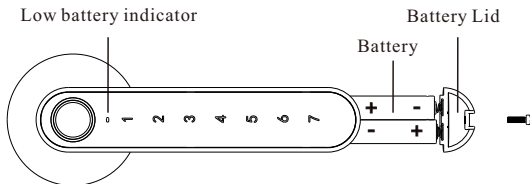

• Functionality

Wake Up Password Keyboard

Swipe the panel to the right or left continuously to wake up the keyboard.

Products Status Description

No.	LED & Buzzer Indicator	Products Status
1	Green LED on the fingerprint keeps steady for 2 seconds and buzzer beeps once	Fingerprint inputting correct
2	Red LED on the fingerprint lights and buzzer beeps twice	Fingerprint inputting wrong
3	LED on button 4 flashes twice and buzzer beeps three times	The touch handle disabled for 3 minutes
4	Red LED flashes on Low-battery indicator	Low battery

Security

If an incorrect code is entered for five times consecutively, the Touch Handle will be disabled for 3 minutes and can not be opened during this period. The purpose is to prevent unauthorized people from opening the handle. Button 4 LED flashes twice and buzzer beeps three times during this period.

• Product Specification

- * Power: 4AAA batteries
- * Fits door: 38mm-56mm
- * Maximum number of storing fingerprints: 100 pieces
- * Bluetooth: Bluetooth Low Energy 4.0
- * Operation system: iOS/Android
- * Power consumption: 0.45mW standby
770mW in operation
- * Weight: 680grams
- * Size:

